



Verifi

P2000 Fingerprint Reader

with ROBOFORM PASSWORD MANAGER

Start Here

IMPORTANT.

This installation manual is for
Windows 7 or 8

Do not use this installation
guide for Windows 8.1

Quick Installation
Guide

Windows
Logon

About the Reader

Proper Use of the Fingerprint Reader

NOTE: Fingerprint verification performance is dependent upon how well you enroll your fingerprint.

START POSITION



END POSITION



PROPER FINGER PLACEMENT

Finger is flat to surface and slid with uniform pressure and speed.



IMPROPER FINGER PLACEMENT

Finger is not flat to surface and /or speed is inconsistent.

VIDEO IS INCLUDED ON CD.
To see a video on proper finger movement, please click [HERE](#).

Make sure you have the following:

- Verifi P2000 Fingerprint Reader
- Windows 7 or Windows 8
- Verifi CD Installation Software

1. Install Reader

Install P2000 for Windows Logon


1.1 WAIT: DO NOT PLUG IN DEVICE YET. Determine your operating system as 32 or 64 bit. If necessary, you may find this information by going to 'Control Panel > System' on your PC to determine your system type. Find the installation folder on the CD and choose the proper folder 32bit or 64bit.

1.2 Your Windows User Account **MUST** be password protected before Windows will allow biometrics to be used. If you currently do not have a Windows password, see Control Panel > User Accounts.

1.3 Install the FMA by launching [Setup 2 - FMA](#). (Note: The FMA is used by Windows for managing your fingerprint enrollments)

1.4 Install the Drivers by launching [Setup 3- Driver](#).

1.5 Plug in your fingerprint device into an available USB port.

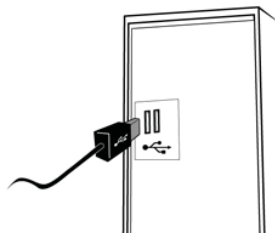

Maintenance


While the sensor is very robust do not use excess cleaning fluids. Use a wet damp cloth for cleaning if needed.

Default "Administrator" Account

Windows does not allow the built in administrator user account to utilize fingerprint biometrics. However, you may use any other user name with or without administrator privileges with your fingerprint device. Only the user "administrator" is prohibited.

2. Enroll

Fingerprint Enrollment

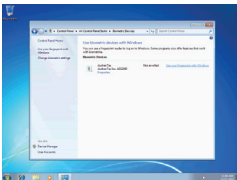

2.1 Go to 'Control Panel > Biometric Devices' and click [Use your fingerprint with Windows](#)

2.2 Select the Continue button in bottom right corner.


2.3 You will be prompted to enter your Windows password to gain access for fingerprint enrollment.

2.4 Follow the step by step instructions for enrolling your first fingerprint.

2.5 It is recommended to enroll additional finger(s). However, this is not required.

2.6 Your Windows logon is now functional and can be tested by performing a logoff/logon.

2.7 Future logons can be performed by the simple swipe of your finger.

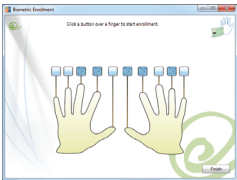

Choosing different fingers

All fingers are available for enrollment but we recommend the index fingers from each hand.

3. Install Roboform



Setting up Roboform Website Password Manager

3.1 Install the Roboform Free edition by launching [Setup 2 - Roboform](#) found on your Verifi CD.

3.2 During the install wizard you will be asked to enter an email and master password to setup your Roboform account. Your Free edition is limited to the PC you first setup. To use the same passcards on other devices you can purchase the Everywhere edition directly from Roboform.

3.3 During installation you will be prompted for an email and Master Password. This password is used to encrypt all your future passcards (Note: passcards are your individual website login credentials) and is a backup to your fingerprint reader.

3.4 Now enable Roboform to use your fingerprint reader as a Master Password by right-clicking on system tray roboform icon and selecting 'Options > Security' and enabling the top check box "Enable fingerprint authentication on WBF reader"

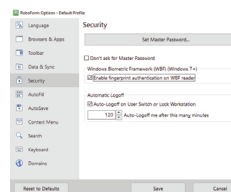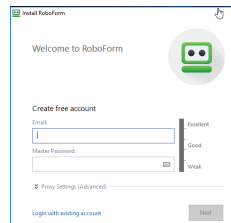


Biometric Domain Logon

Please, contact your local IT administrator regarding biometric domain logon to domain.

4. Using Roboform


Using Fingerprint for Master Password

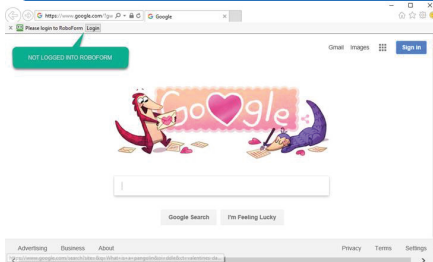

4.1 To Login to Roboform use the Login Button located in the browser toolbar.

4.2 Swipe finger to authenticate to Roboform.

4.3 This effectively removes the need to type your Roboform Master Password however you will always want to remember this password in case of hardware failure, reinstallation, or non-biometric use of Roboform.

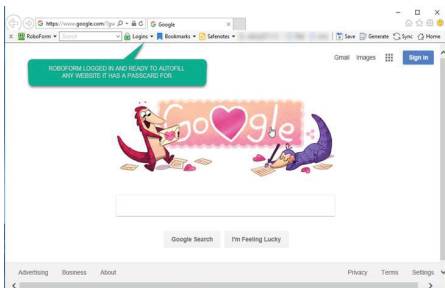

Begin Using !

Your new Fingerprint Reader is capable of performing Windows Logon, User Account Control (UAC) for administrative credentials and with Roboform as a Master Password.

To test, log off and then back on to your Windows account using your fingerprint.

Now you can enjoy logging on to Windows, Web sites, and programs with just a slide of your finger.

ATTENTION:

For help using Roboform go to <http://www.robiform.com/support/overview>

The site includes manuals, tutorials, and online support.



Verifi

P2000 Fingerprint Reader

with ROBOFORM PASSWORD MANAGER



www.zvetcobiometrics.com

ZVETCO Tech Support

For technical support and questions
please email or call:

technical.support@zvetco.com
407-567-7360

ZVETCO Sales

For further Sales
information please
call:

407-567-7358

Zvetco Biometrics
489 State Rd 436, Suite 109
Casselberry, FL 32707
407-567-7357

2017 Zvetco Biometrics. All rights reserved. All trademark names are registered trademarks of respective manufacturers listed.